 
 


CHAMBERLAIN™
merlin
 professional

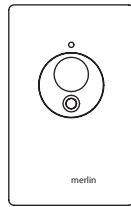

DO NOT operate your garage door unless it is in full view and clear of obstruction and is properly adjusted. No one should enter or leave the garage whilst the door is in motion. Do not allow children to operate push button(s) or remote. Do not allow children to play near

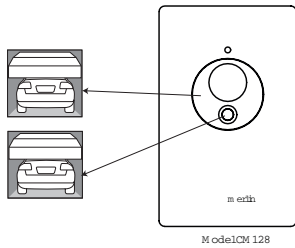 


CHOOSING A BUTTON

You can use either of the two buttons to activate your door. If you have multiple doors or an automated gate you may use the other button to activate it, provided you have a compatible receiver. For further details please refer to our web page.

ADDING REMOTES MT SERIES

1. Press and hold the selected remote push button you wish to open the door.
2. Press and release the orange "Learn" button (1) on the opener panel. The opener light will flash once. Release the remote push button. If no light bulb is installed, two clicks will be heard.

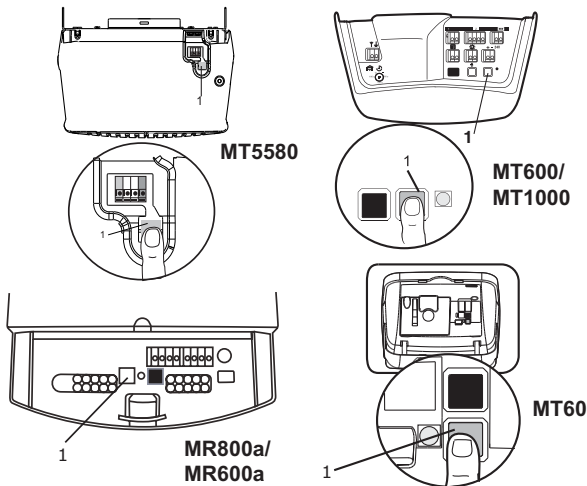

ADDING REMOTES MR SERIES

1. Press and hold the selected remote push button you wish to open the door, the orange LED will flash.
2. Press and release the purple "Learn" button (1) on the opener panel. The opener's courtesy LEDs will flash once. Release the remote push button.

If you release the remote control push button before the opener light or LEDs flash, the opener has not accepted the code.

 
FOR GATES SEE GATE USER MANUAL

433MHz Rolling Code Wall control

CM128 Wall mount two channel remote control

Suits: Merlin Professional products garage door opens. MT60, MT600/MT1000, MT5580, MR600a/800a and Merlin Gate Motors MGS300/400, MGA600 and MGS300/500/1000

Chamberlain does not recommend or endorse this accessory's use with products other than garage door or gate motors.

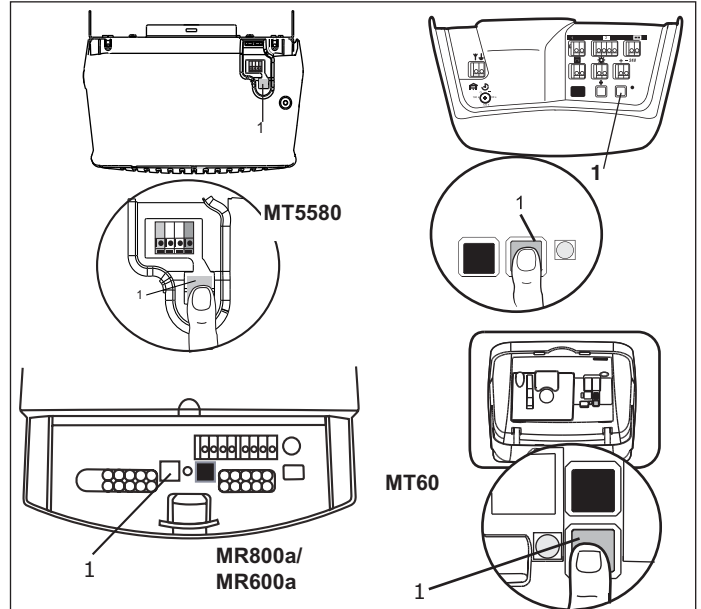

To Erase All Programmed Remotes/Codes

Press and hold the "Learn" button (1) on the opener panel until the indicator light turns off (about 6-10 seconds).

Note: This procedure erases all codes from the operators memory.

 
To add or re-program valid remotes into your opener, follow the procedure laid out in "ADDING REMOTES".

NOTE: FOR GATE MOTORS CONSULT OWNER'S MANUAL.

Replacing Batteries

To open the cover

Gently pry the front cover from the bottom of the CM128 to expose the battery terminals. Remove the two CR2025.

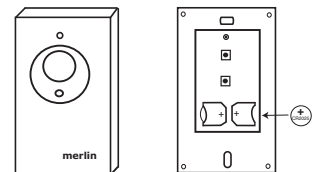

Replace the CR2025

replace the batteries with the positive terminals up (i.e. you should be able to read the model number)



Chamberlain Australia Pty Ltd
 PO Box 1446
 Lane Cove NSW 1595

Chamberlain New Zealand Ltd
 P.O. Box 100-221
 North Shore 0745
 www.chamberlainnz.com

