


## M-128 wireless wall switch

(to open up to two doors or gates)

- Uses high security code hopping technology.
- Only suits openers from 1999 if they are fitted with Merlin's code hopping receiver.
- Incompatible with all earlier models, unless add-on rolling code receiver and adapter loom is fitted.
- Suits gate openers fitted with Merlin M-530 or M-532 code hopping receiver cards.

To fit or replace the batteries, pull the front cover off, and insert the batteries with their writing facing up towards you.

To program this control into the memory of your opener, locate the 'learn' button on the opener or receiver. Press the 'learn' button for more than one second then press the required button on this control for one second. Press this control's button again to confirm.

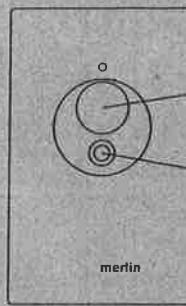

To attach to a wall or other flat surface, pull the front cover off and use any suitable flat head screws through the holes in the backing plate.

### To reduce risk of personal injury by the door or gate:

1. Only wall-mount the remote control above 1.5 m from the floor.
2. Only wall-mount the remote control in sight of the door or gate.
3. Supervise every operation of the door or gate.
4. Do not allow children to play with the door or gate controls.



**Merlin Garage Openers**

Australia 1800 638 234

New Zealand 0800 653 667

United Kingdom 0800 073 0112

[www.merlingo.com](http://www.merlingo.com)



N2966



9 417593 001283



19 SEP 05  
EDR4 0043A